


Pencllic N3 Office Quickguide

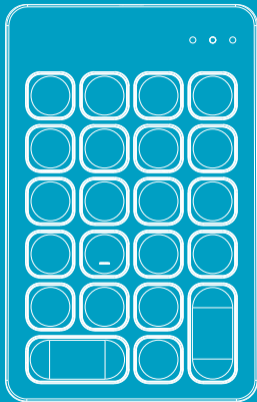

EN

Welcome to the quick guide.
Penclic Numpad N3 Office combines ergonomically sound design with modern keyboard technology to bring you comfort and efficiency.


Getting started Penclic N3 Office

Connect the USB cable to the computer and the N3 Office.
Driver installation starts automatically.

How to use your Penclic N3 Office

Penclic Numpad N3 Office LED indicates Num Lock status.
Blue text indicates function while Num Lock is off
Tap Num Lock key twice to start the calculator (windows system only)
(Optional) Download Macro configuration software at:
www.penclic.se/download

Key	Function
1	End
2	Down Arrow
3	Page Down
4	Left Arrow
6	Right Arrow
7	Home
8	Up Arrow
9	Page Up
0	Insert
.	Delete

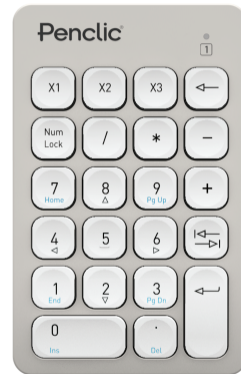

Technical specifications

- The supported platforms for Penclit N3 Office are all operating systems that support HID 1.1. These include Windows XP or later, Mac OSX version 10.1 or later and Linux/BSD. No extra software/driver installation is needed, macro software is optional.
- USB Connection.

Measurements

- Height: 6 mm (21 mm at top), Base: 140 x 88 mm.
- Weight: 233g including 1.2m cable.

Troubleshooting

www.penclit.se/troubleshooting

- Make sure the Penclit Numpad USB connector is firmly attached to the computer's and the N3 Office.
- Connect to another USB port.
- Connect to another computer.

Technical support

Should you require additional technical support with your Penclit®, please use our Web site (www.penclit.se) for further information or contact our support group through e-mail. Call Technical Support during business hours, Central European time (CET).

Contact

+46 70 580 2140
contact@penclit.se

Start.



Penclit AB
contact@penclit.se / www.penclit.se
phone: + 46 70 580 2140